

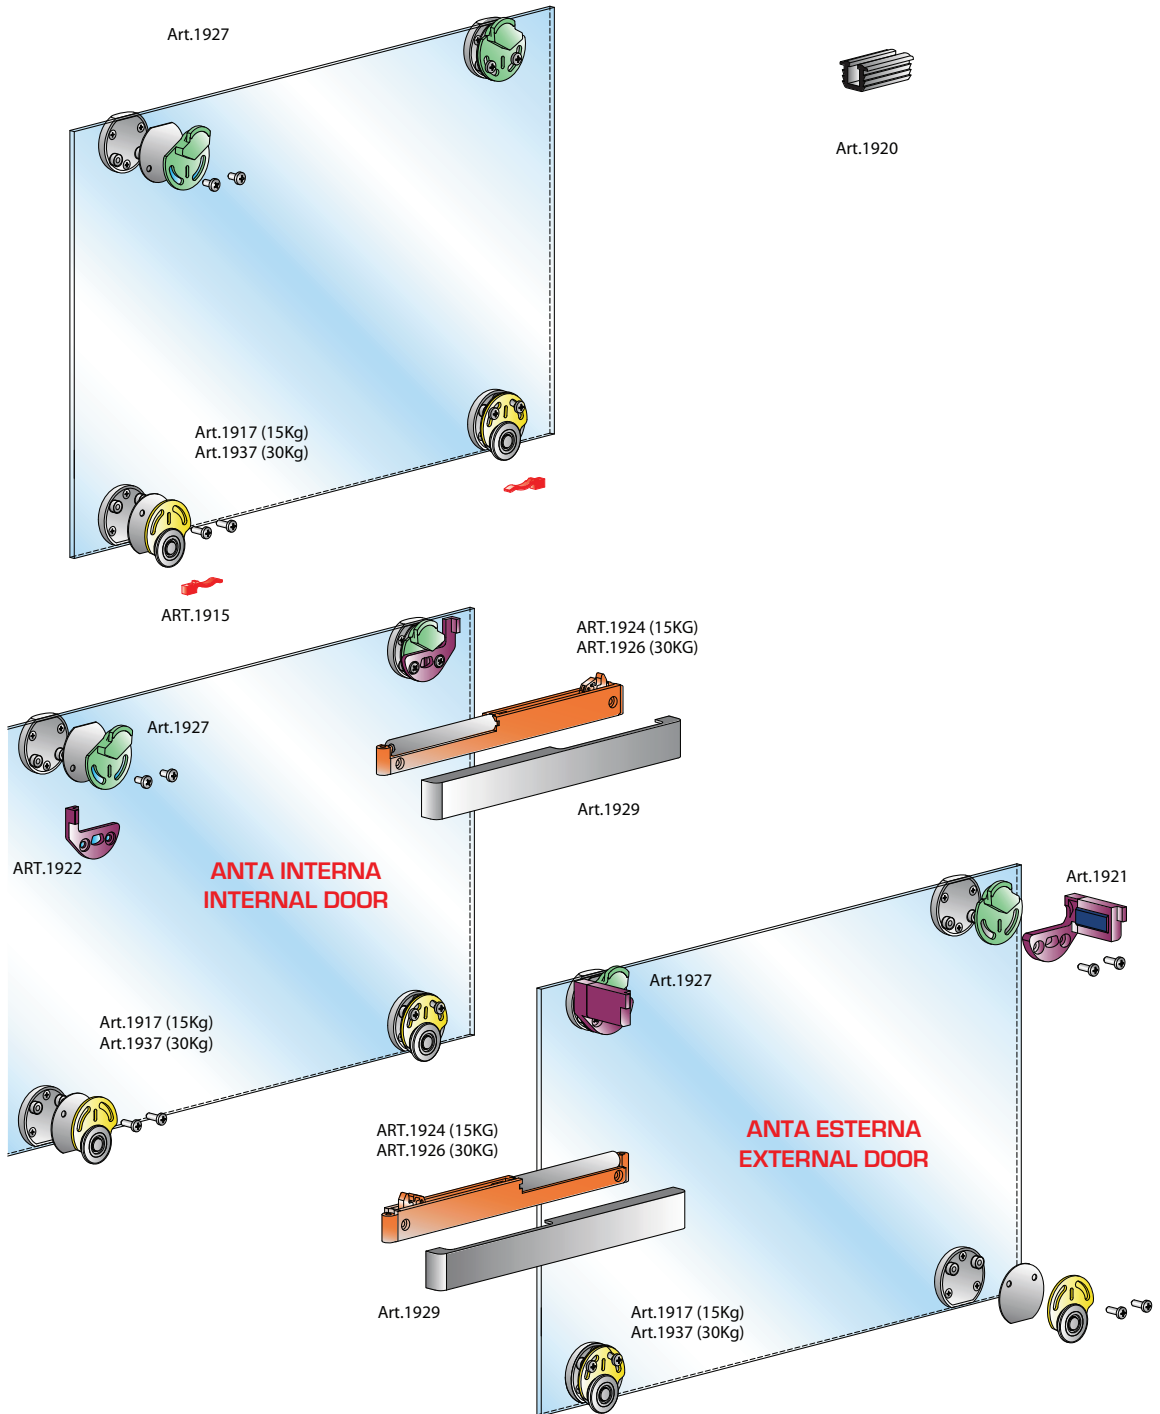


SERRARE LE VITI CON MODERAZIONE ONDE EVITARE SPANATURE  
TIGHTEN THE SCREWS CAREFULLY TO AVOID STRIPPING

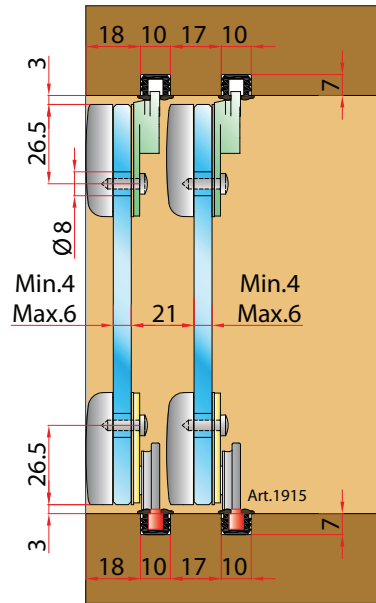

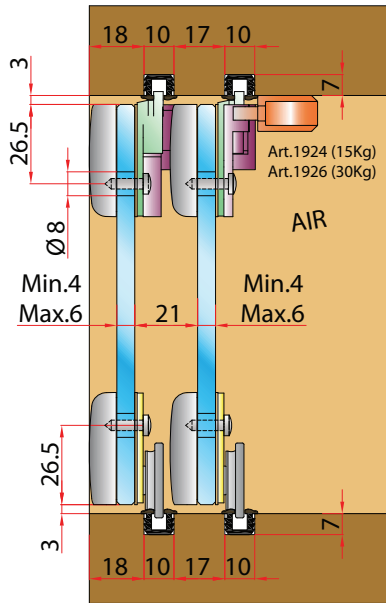

PER 1 ANTA / FOR 1 DOOR **MAX 15 KG**

ART.1917/1915/V/A  
ART.1917/1915/V/AL  
ART.1917/1915/V/N



Art.1917    Art.1927    Art.1915    3,9x13 N°8



PER 1 ANTA / FOR 1 DOOR **MAX 30 KG**

ART.1937/1915/V/A  
ART.1937/1915/V/AL  
ART.1937/1915/V/N



Art.1937    Art.1927    Art.1915    3,9x13 N°8



PER 1 ANTA INTERNA  
FOR 1 INTERNAL DOOR **MAX 15 KG**

ART.1917/15/1/V/A  
ART.1917/15/1/V/AL  
ART.1917/15/1/V/N



Art.1917    Art.1927    3,9x13 N°8    Art.1922



PER 1 ANTA INTERNA  
FOR 1 INTERNAL DOOR **MAX 30 KG**

ART.1937/30/1/V/A  
ART.1937/30/1/V/AL  
Art.1937/30/1/V/N



Art.1937    Art.1927    3,9x13 N°8    Art.1922



PER 1 ANTA ESTERNA  
FOR 1 EXTERNAL DOOR **MAX 15 KG**

ART.1917/15/1E/V/A  
ART.1917/15/1E/V/AL  
ART.1917/15/1E/V/N



Art.1917    Art.1927    3,9x13 N°8    Art.1921



PER 1 ANTA ESTERNA  
FOR 1 EXTERNAL DOOR **MAX 30 KG**

ART.1937/30/1E/V/A  
ART.1937/30/1E/V/AL  
ART.1937/30/1E/V/N



Art.1937    Art.1927    3,9x13 N°8    Art.1921

